






BLOSSOM[®]
luxury made simple

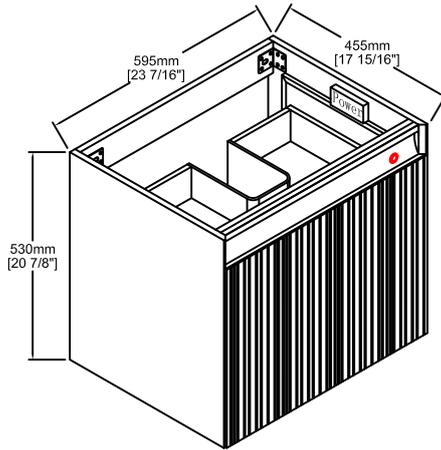

V8043 24

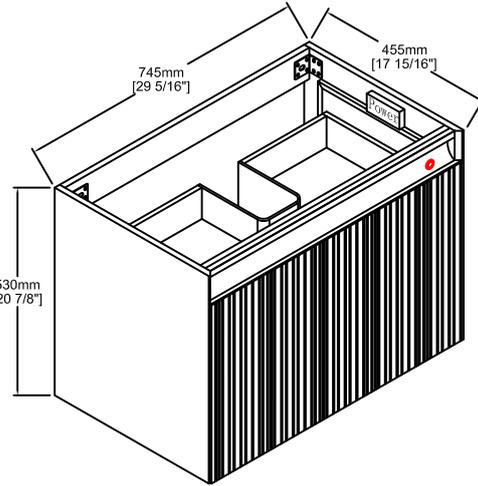

V8043 30

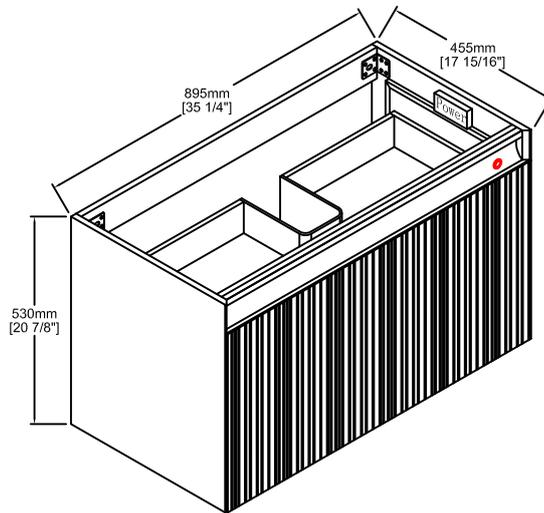

V8043 36

[**LILLE**]
Series Vanities

Specification & Installation Guide

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:

⚠ WARNING: To reduce the risk of burns, fire, electric shock or injury to persons. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer, Never drop or insert any object into any opening. Do not use outdoors.

⚠ WARNING: Risk of electric shock. Connect this furnishing to a properly grounded circuit only. See grounding instructions.

ELECTRIC CONNECTIONS

ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENCED ELECTRICIAN.


⚠ WARNING: Shut off power before wiring the cabinet.
Requires 120 VAC 20 Amp GFI protected Circuit.

GROUNDING INSTRUCTIONS:


⚠ CAUTION: This product must be connected to a grounded metal permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.

⚠ WARNING: An Electrical option cabinet must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations required by the National Electric Code.


The electric wire comes through the access hole on the top of the cabinet. exact location of access hole varies depending on the product models. Please refer to the actual product for the exact location.

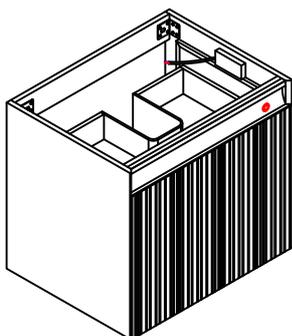

Make connection with Junction box
Neutral to white.
Line to black.

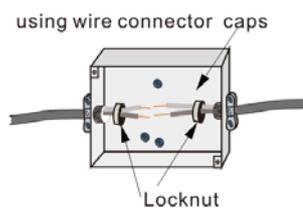

★ junction box is not included ★

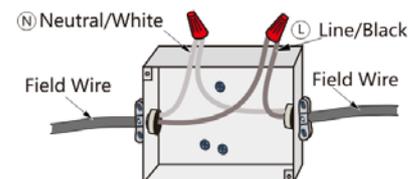

Features

- Modern design with melamine finishes.
- Soft-closing drawers .
- Compatible ceramic basins or artificial stone basins.
- Compatible matching mirror, medicine cabinet or LED mirror, medicine cabinet.
- Easy installation.

Package Dimension

24" 26" X 20-11/16" X 23-5/8"

30" 32-1/16" X 20-11/16" X 23-5/8"

36" 38" X 20-11/16" X 23-5/8"

Colors / Finishes

DARK WALNUT STRIP - 19

Gross Weight

24" 64 LBS



30" 72 LBS

36" 79 LBS

Sink Top Options



	Vanities	Ceramic basin	Artificial stone basin
24"	V8043 - 24	C04 2418	A10 2418 25
30"	V8043 - 30	C04 3018	A10 3018 25
36"	V8043 - 36	C04 3618	A10 3618 25

24" 23-7/16" x 17-15/16" x 20-7/8"

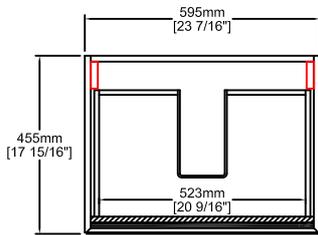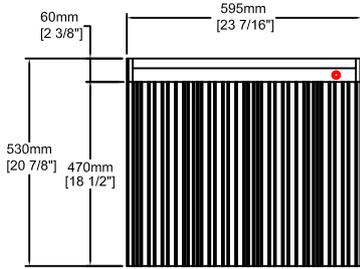



TOP VIEW

30" 29-5/16" x 17-15/16" x 20-7/8"

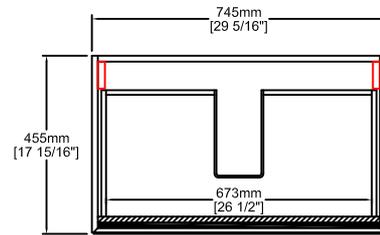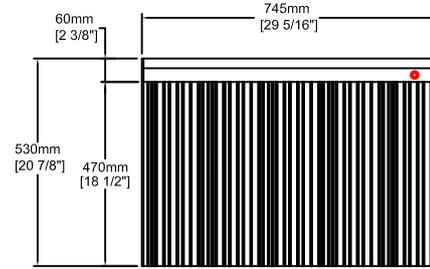


TOP VIEW

36" 35-1/4" x 17-15/16" x 20-7/8"

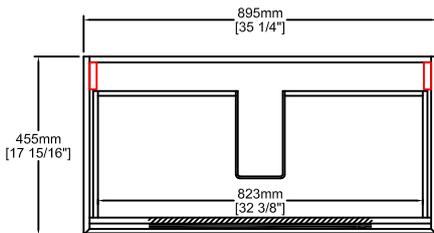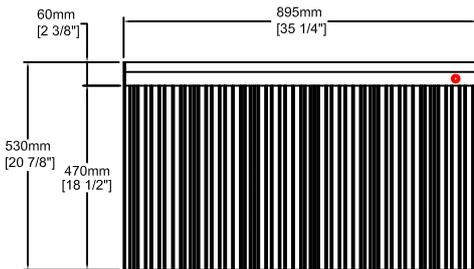


TOP VIEW

Side View

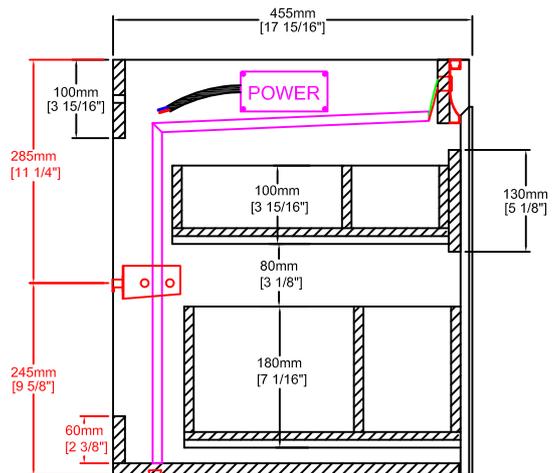


SECTION VIEW

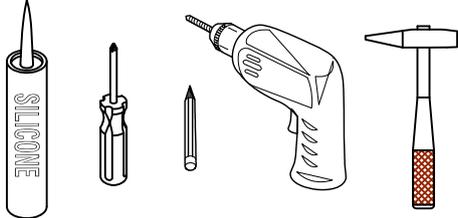Hardware				Tools (not includes)
NO.		Draw	QTY	
A	White rubber plug(Ø6mm)		2	
B	Screws(Ø4 x 68mm)		2	
C	Stainless steel cover		2	
D	Leveling bracket		2	
E	Green rubber plug		6	
F	Screw		6	

Wall blocking is required for all installation

The suggested heights without the sink are 30-5/8" for Blossom Resin Basin, or 32-5/8" for Blossom Ceramic Basin.

Depending on the sinks selected, the total height will vary from 33-1/2"(850mm) to 35-1/4"(895mm). If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

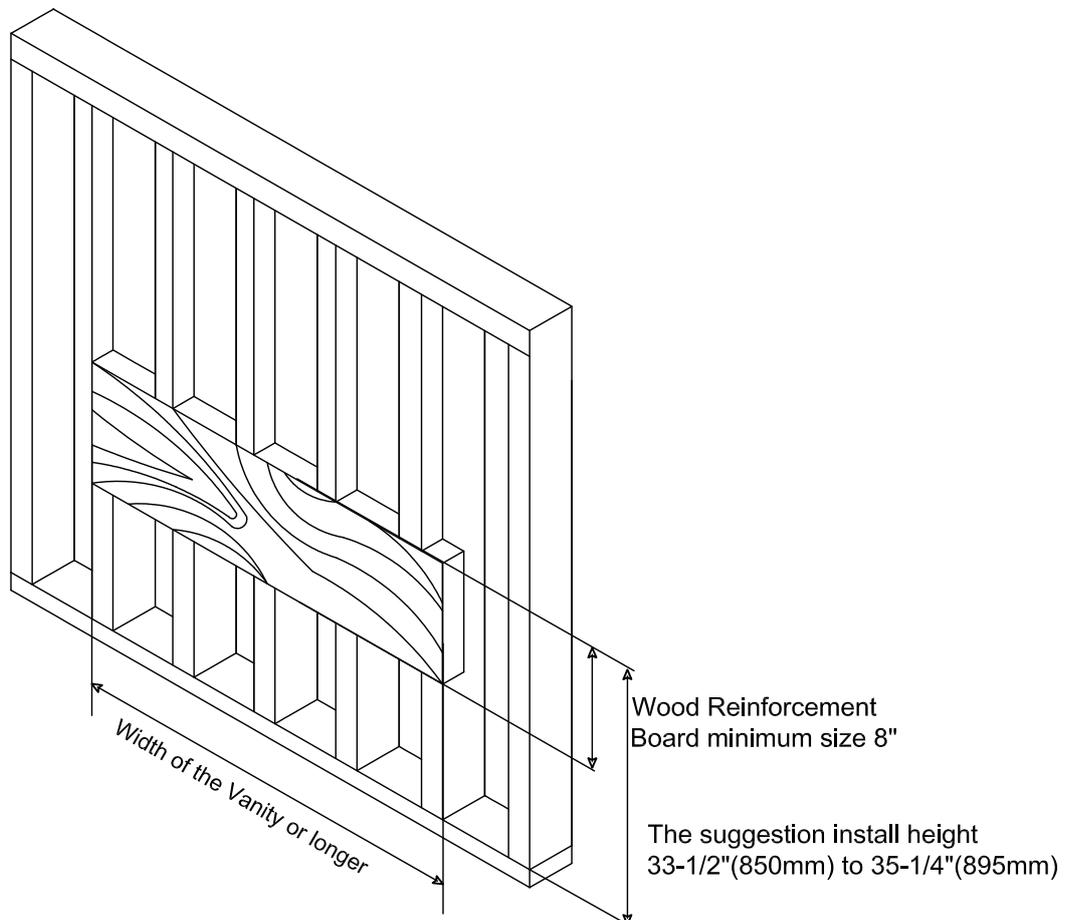


STEP 1

- Draw a punched position on the wall with a pencil.


Tip:

1. The suggestion height of the cabinet is 32-11/16" (830mm) - not including the basin.
2. The suggestion height of the upper hole is 30-11/16" (780mm).
3. The suggestion distance between the upper hole to the lower hole is 10 1/16" (255mm).

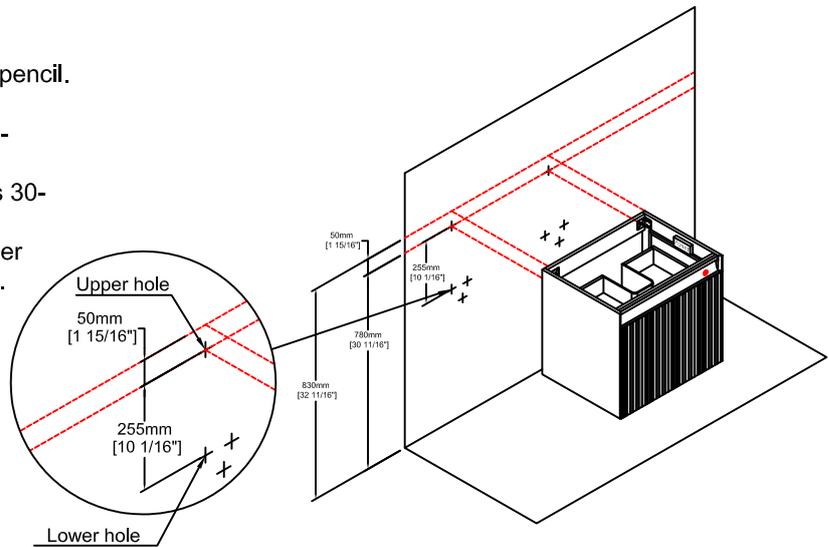


STEP 2

- Drill the holes with suitable drill-bits base on different condition of the wall.

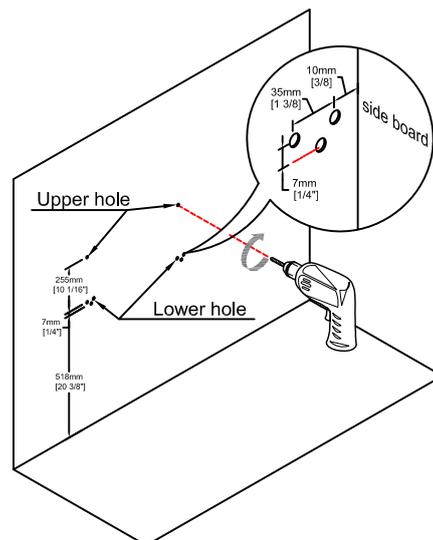



STEP 3

- Use a hammer to knock the white expansion rubber plug into the upper hole, and knock the green rubber plug into the three lower hole, align the hole in the wall and lock the leveling bracket to the wall with screws.

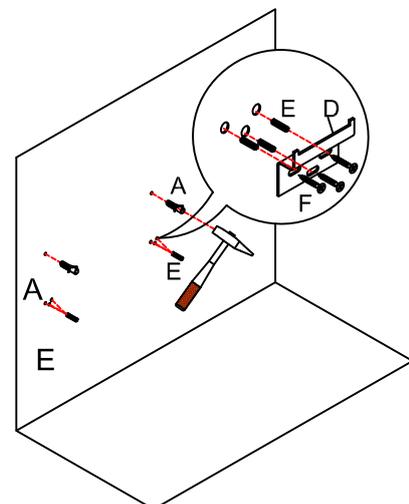



STEP 4

- Hang the accessories behind the cabinet on the leveling bracket.(As the picture shows).

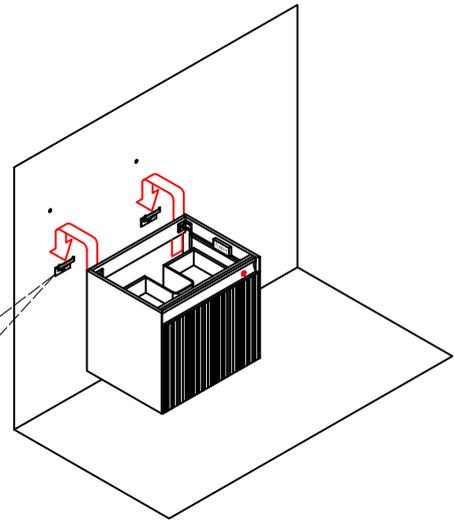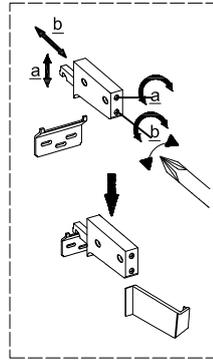



STEP 5

- Fix the cabinet to the wall with screw B and cover it with a stainless steel lid C.

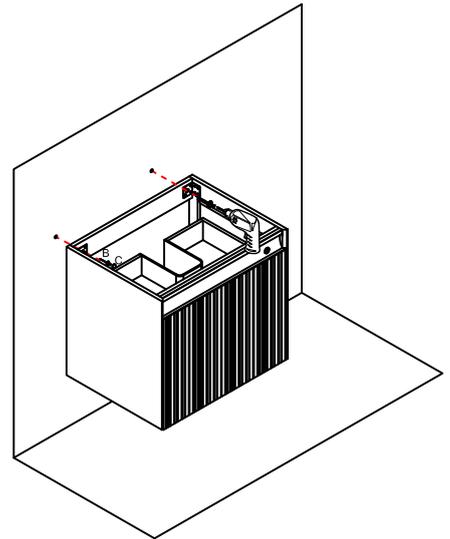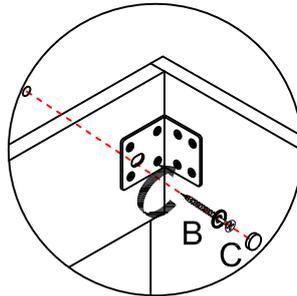

STEP 6

- Install sink top with silicone and finish.

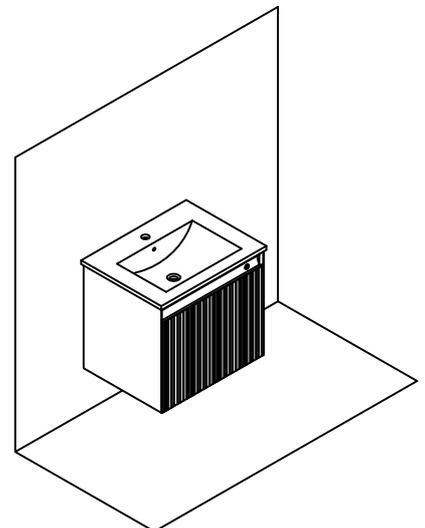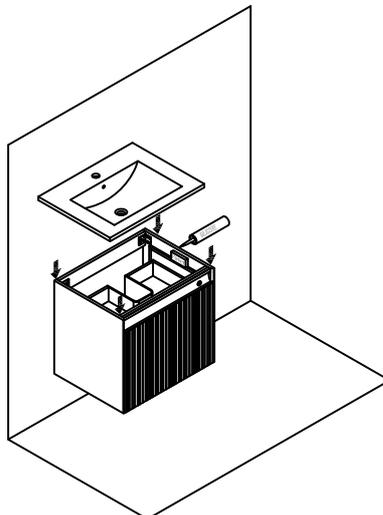



Blossom Kitchen & Bath Supply Corporation
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.